

AMBISONIC



## AVTRYCKSGUIDE TILL AUDIONOM

1. Ett fullständigt avtryck av båda öronen behövs. De måste innehålla hela helix, crus helix, tragus och antitragus. **Viktigt är att avtrycket görs förbi hörselgångens andra böj.**  
(Var noggrann med att undersöka örat så det inte finns någon inflammation eller andra hinder.)
2. Vi behöver ett avtryck gjort av silikon-material och vi rekommenderar att material med hög viskositet används.
3. Avtrycken måste göras med öppen mun. Använd ett 1-2" bitblock för att reducera käkrörelser. Detta kommer ge en bättre tillslutning i slutprodukten.

När du som kund fått avtrycken skickas de väl förpackade till oss.

Om du skickar från **Sverige**:

Ambisonic AB  
Fredsgatan 23  
172 33 Sundbyberg


Om du skickar från **Norge**:

Ambisonic Norway  
v/ Philip Sundbäck  
Skotselvveien 131  
3302 Hokksund


**Märk dem tydligt med namn och telefonnummer!**

The following images are meant for reference purposes only. We will not accept impressions that are already pre-trimmed.  
Impressions must include all key areas to be usable for custom in-ear monitors.

MULTIPLE ANGLED EXAMPLE OF GOOD IMPRESSIONS

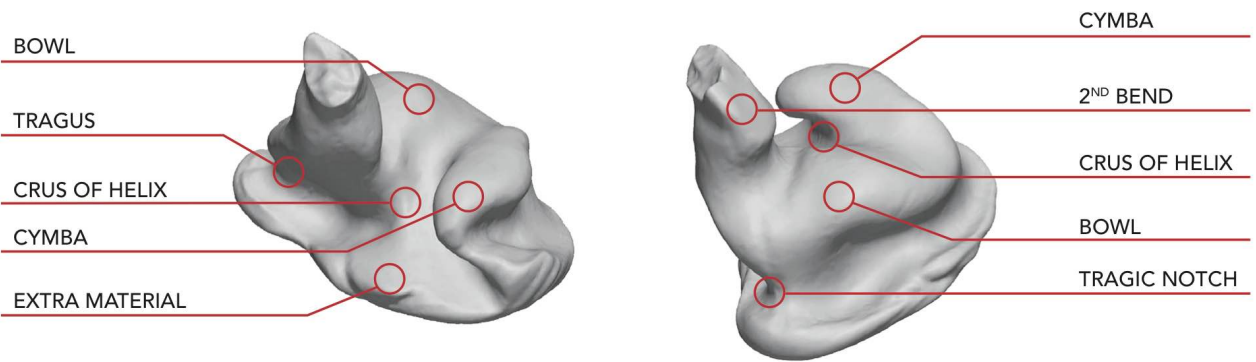

WE REQUIRE EXTRA MATERIAL OUTSIDE OF THE EAR ABOVE THE TRAGUS

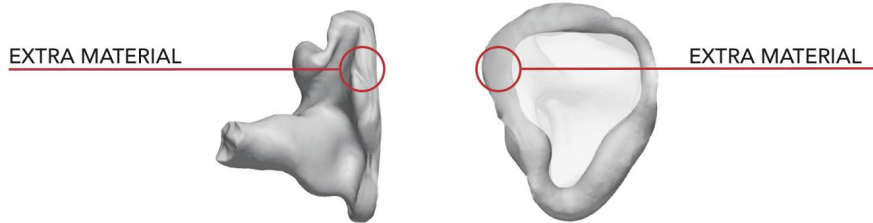

⚠ EXAMPLES OF BAD IMPRESSIONS ⚠

